



Part No.	Item	Part No.	Item
1	Gun Housing	16	Intermediate Rod
2	Gun Housing Cap	17	Delivery Valve Cone
3	Inductor Coil (110v/60Hz, Coil Only)	18	Delivery Valve Spring
4	Trigger Switch Assembly	19	Swirl Head (17,18,19 Form a Set)
5A	I Core	20	Nozzle - Straight
5B	E Core with Inductor Coil	20A	Nozzle - Adjustable
5C	Coil Full Set (E Core + Coil + I Core)	21	Solvent Jar
6	Electric Wire	22	Suction Pipe with Filter
7	Pressure Control Bolt	23	Conical Screw
8	Pressure Control Knob	24	Connector Block
9	Pressure Control Knob Spring	25	Rubber Bush
10	Front Body	26	Gun Housing Screws (3 pcs)
11	Adjusting Roller	27	Allen Grub Screw M3
12	Adjusting Roller Spring	28	Coil Bush
13	Pump Cylinder	29	Switch Ring - Threaded
14	Piston	30	Allen Key
15	Piston Spring	31	Coil Screw, Nut & Washer